

**3:1 SERIES OIL PUMP
PART LIST**

Spare parts list

Pos.	Name	Q.ty	Code
1	Air motor cover	1	U2304201
2	Piston	1	U2304202
3	Air motor shell inside	1	U2304203
4	Air motor shell outside	1	U2304204
5	Bracket	1	U2304205
6	Air control center	1	U2304206
7	Slider	1	U2304207
8	Gasket	1	U2304208
9	Soft gasket	1	U2304209
10	Securing washer	1	U2304210
11	Bracket	1	U2304211
12	Washer	1	U2304212
13	Connect tube	1	U2304213
14	Suction tube	1	U2304214
15	Spring circlip	1	U2304215
16	Valve seat	1	U2304216
17	Filter or connector	1	U2304217
18	Piston	1	U2304218
19	Connecting shell	1	U2304219
20	Connect shaft	1	U2304220
21	Connect shell	1	U2304221
22	Middle shaft	1	U2304222
23	Air center cover	1	U2304223
24	Slider shell	1	U2304224
25	Piston shaft	1	U2304225
26	Washer	2	U2304226
27	Spring shell	2	U2304227
28	Spring	2	U2304228
29	Spring seat	2	U2304229
30	Trip shoe guide	2	U2304230
31	Press piece	1	U2304231
32	Nut	1	U2304232
33	Outlet	1	U2304233
98	Pin	2	U2304234
99	Pin	1	U2304235
100	Ball	1	U2304236
101	Small circlip	2	U2304237
102	Ball	1	U2304238
103	Screw	2	U2304239
204	O-ring	1	U2304240
205	O-ring	1	U2304251
206	O-ring	2	U2304241
207	Silencer	2	U2304242
208	O-ring	1	U2304243
209	O-ring	1	U2304244
210	O-ring	1	U2304245
211	O-ring	1	U2304252
212	O-ring	1	U2304246
213	O-ring	1	U2304247
214	U seal	1	U2304248
215	Guiding	1	U2304249
216	Quick coupling	1	U2304253
217	OD seal	1	U2304250

Exploded view

