



RIM LOCK RELEASE TOOL BMW/MINI

INSTRUCTIONS
91372250

SAFETY NOTICE

To understand the functioning of the tools, is it necessary to read the manual first!

- > Read these instructions before assembling, during installation and throughout use and in the proper sequence
- > Always refer to the OEM manufacturer's instructions and service manuals for the latest data and to maintain the correct sequence
- > These work instructions and the recommended tools are meant to serve as aides only and are by no means a guarantee for certain results.
- > This tool kit is a special collection and it has been tested and used successfully on several occasions. It is of the utmost importance to maintain the correct procedure as per the instructions
- > The use of the tools should only be carried out by qualified personnel!



ATTENTION
Special caution



CORRECT



LIGHT BULB
Hint or recommendation




WRONG



SAFETY GOGGLES
Wearing safety goggles
necessary

PARTS

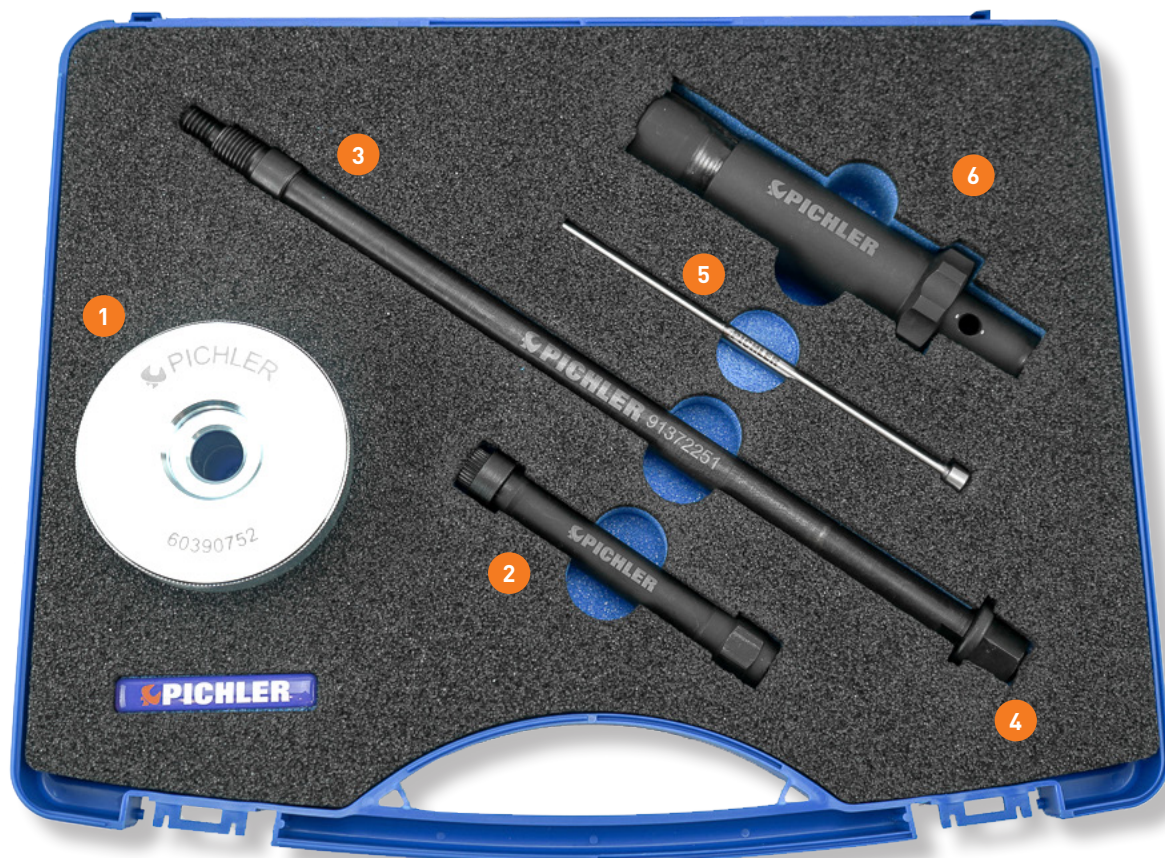

NR.	ART.-NR.	DESCRIPTION
1	60390752	Impact weight 1350 gr.
2	91372253	multi-tooth extractor
3	91372251	Sliding rod with AG M12 and M16x1.5, length 315mm
4	91372252	collar nut M12 DIN 6331
5	91372254	operating toggle
6	91372256	collet



ATTENTION

In order to get meaningful pictures for these instructions, the respective work steps are photographed here on a specially cut wheel rim.

WORK STEPS

Push the collet **91372256** completely over the wheel lock bolt.



Insert the operating toggle **91372254** through the cross hole of the collet **91372256**.



By turning the sleeve of the collet **91372256** to the right and simultaneously holding the basic unit with the aid of the actuating toggle **91372254**, close the collet **91372256** and thereby grip the wheel lock screw. Then remove the operating toggle **91372254** again.



Screw the hammer bar **91372251** into the collet **91372256** and tighten.



Push the impact weight **60390752** onto the hammer bar **91372251**..



Screw the collar nut **91372252** onto the pull rod **91372251** and tighten.



Remove the bolt head from the wheel bolt by striking it several times with the hammer **60390752**.





Use a hammer to drive the multi-tooth extractor **91372253** into the teeth of the wheel bolt.



Using the SW17 socket and suitable actuation, unscrew the remaining wheel lock bolt.



Push the operating toggle **91372254** into the longitudinal bore of the multi-tooth extractor **91372253**.



Use a hammer to knock out the remaining wheel bolt from the spline of the extractor.



RECOMMENDED ACCESSORIES

IMPACT NUT SW 17, 19, 21 AND 22 WITH PLAS-
TIC PROTECTION

9941730



WHEEL HUB GRINDER FOR CARS

6149560



IMPACT WRENCH 1/2" 1600 NM

80305000



TIRE FILLER

9139420



WHEEL MOUNTING AID

61376200



TORQUE WRENCH 1/2" 20-200 NM

9066030



TORQUE RODS SET 8 PCS.

9980800



RATCHET HEAD 1/2"

74110160




RECOILLESS SOFT HAMMER


65506700



NOTES

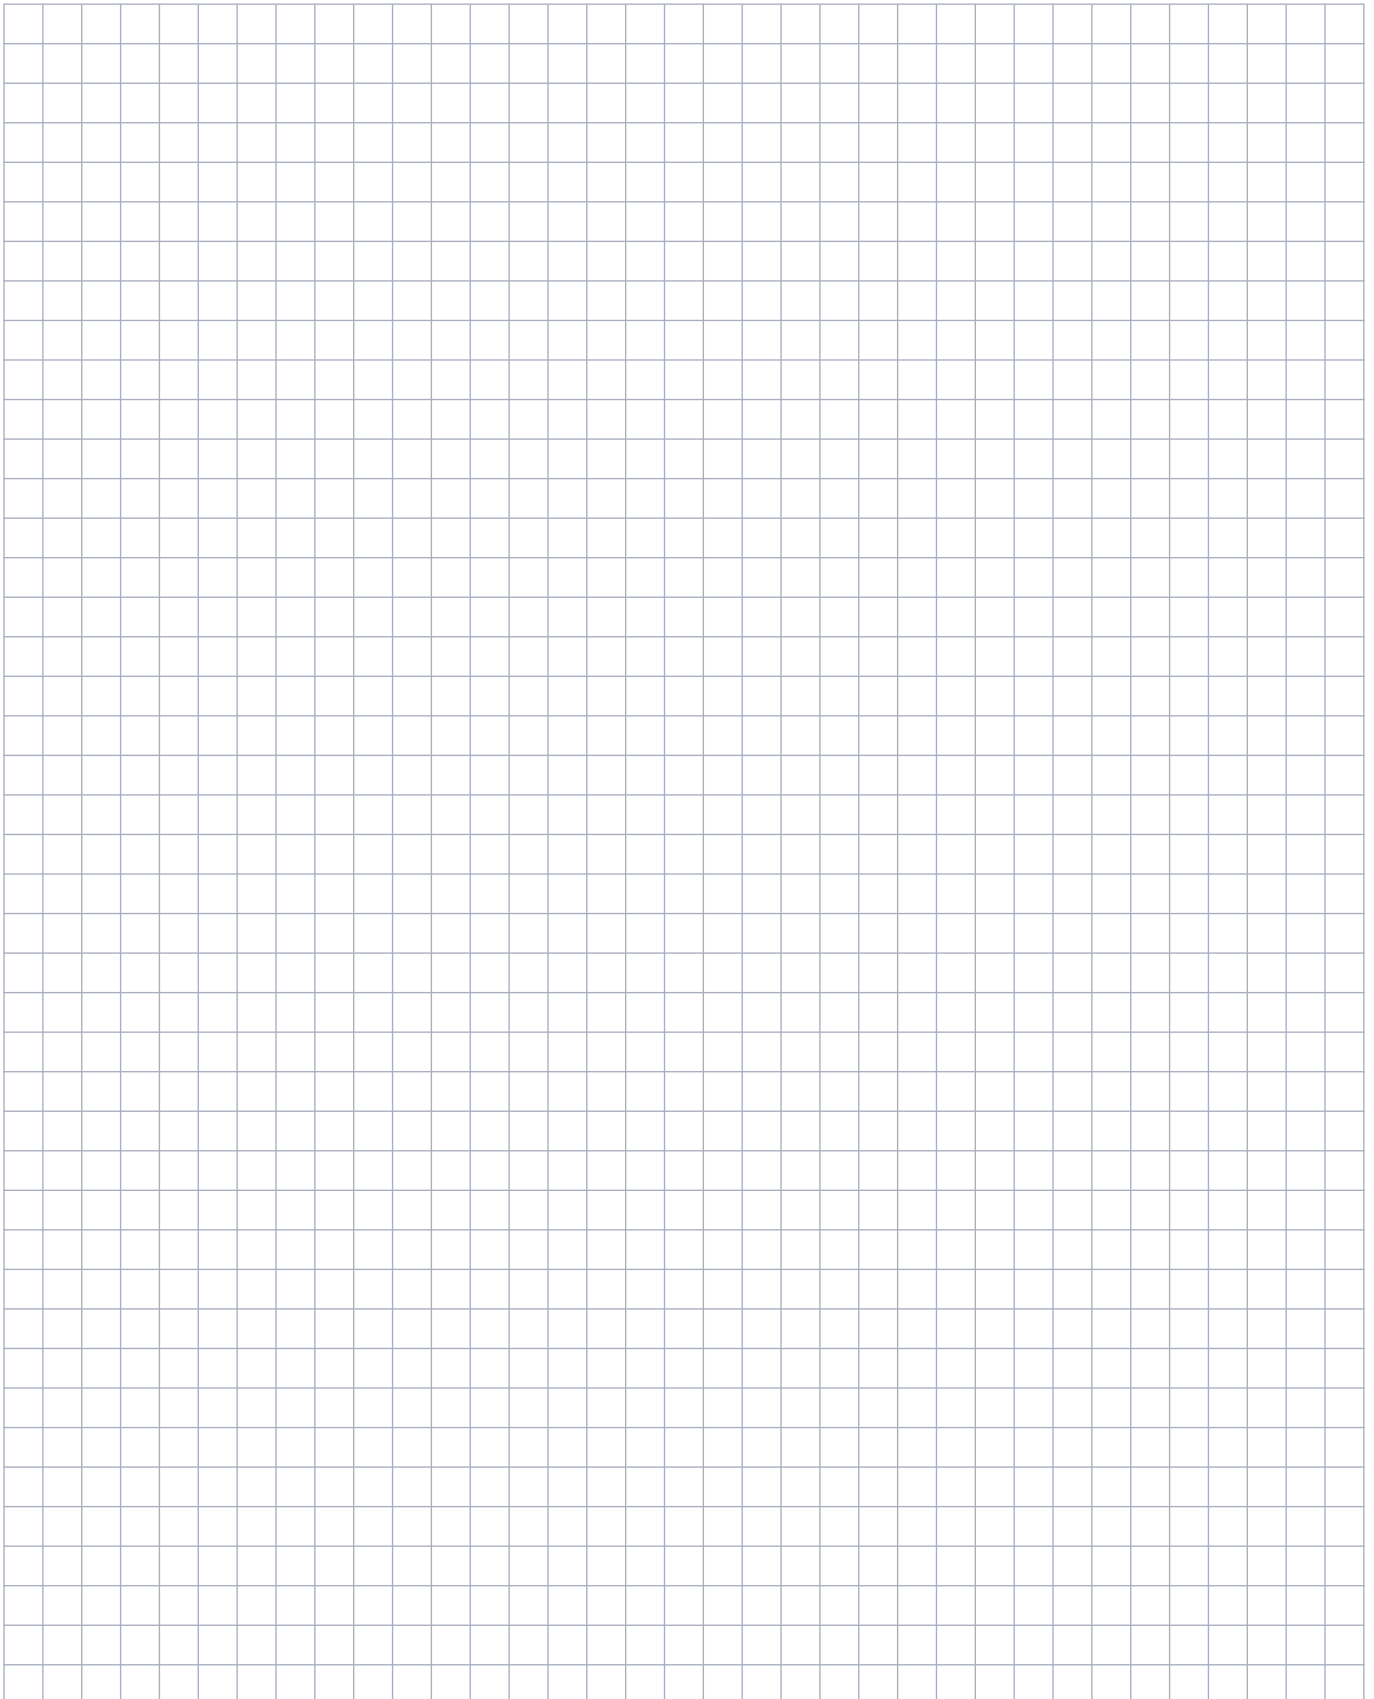

© 2010 Pearson Education, Inc.

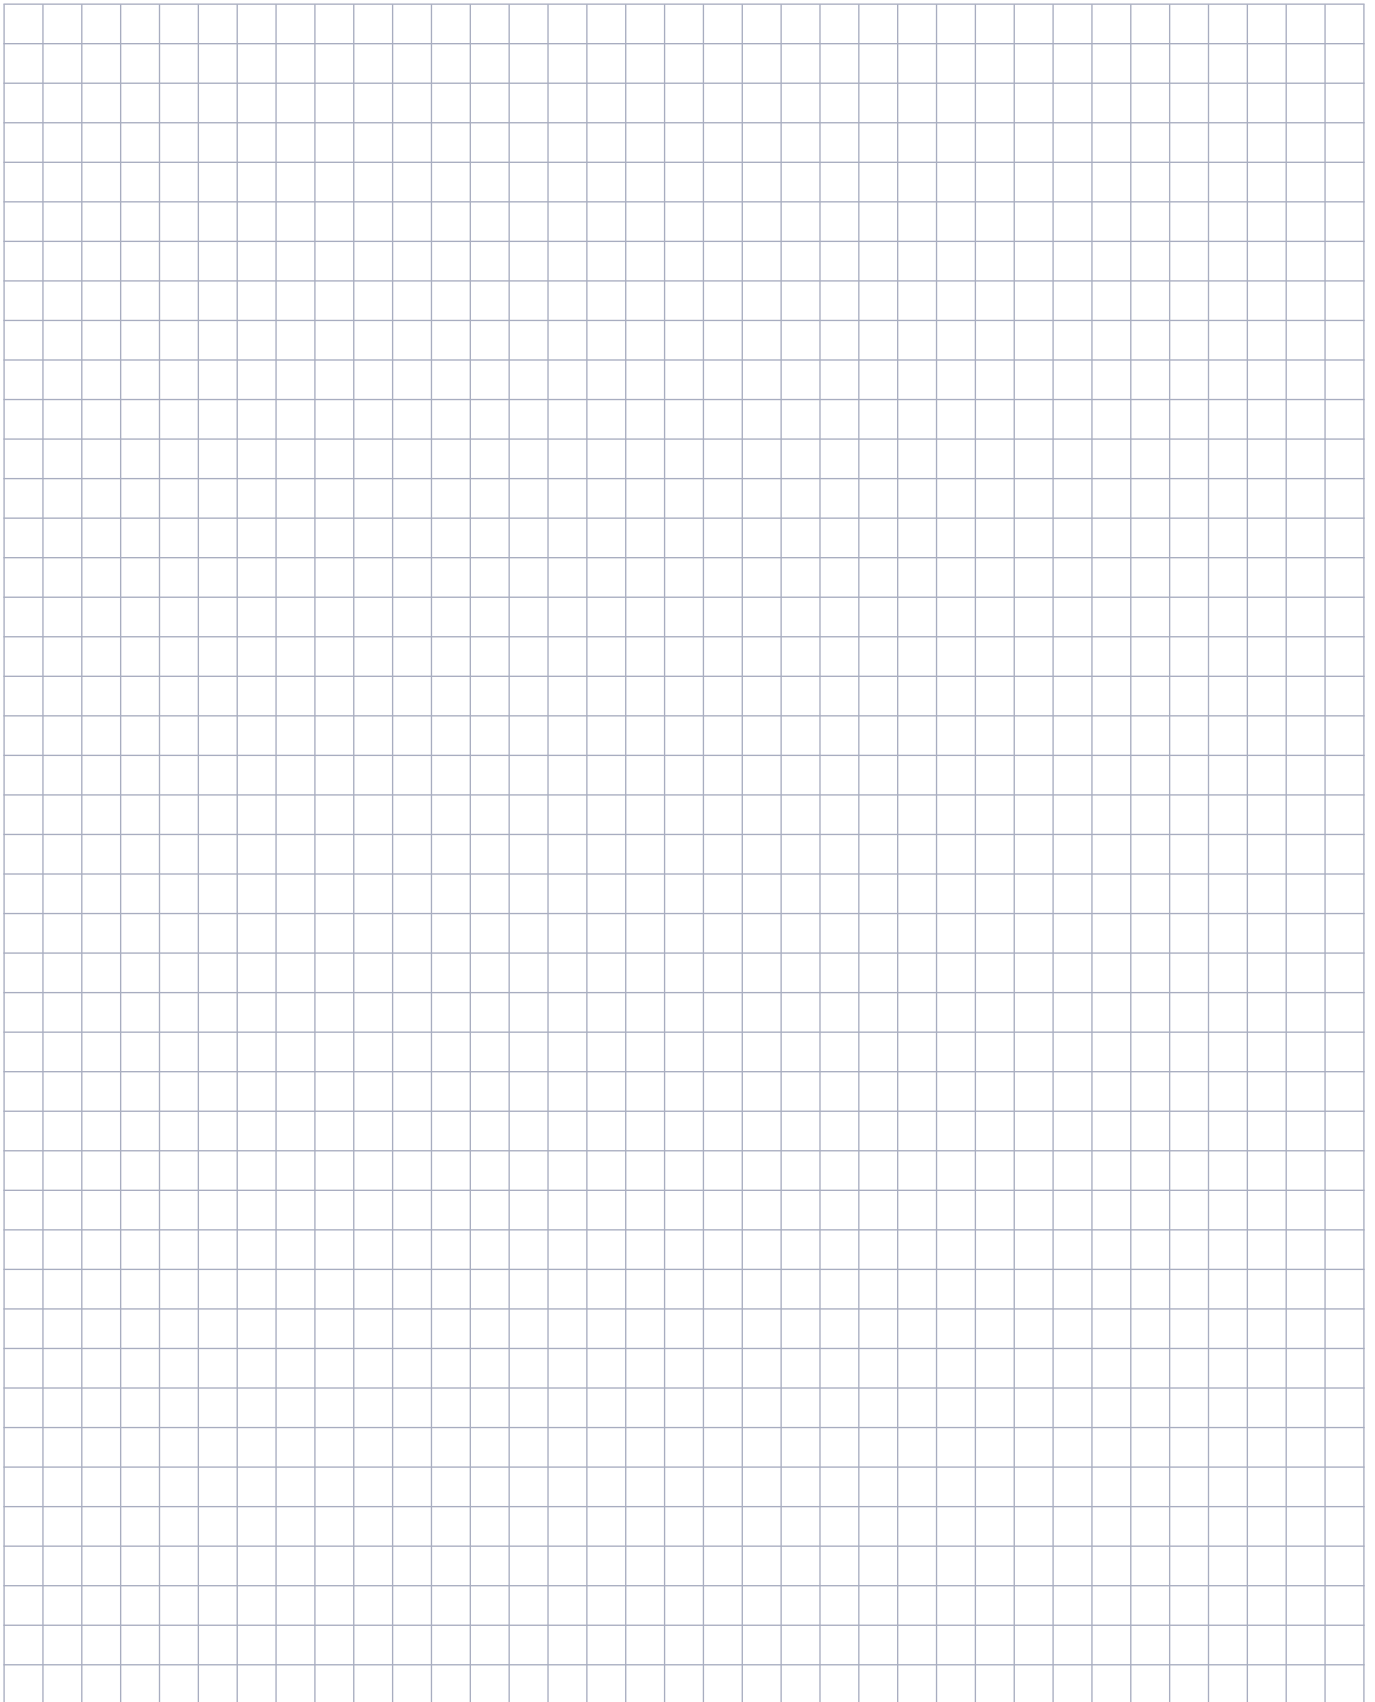

PICHLER Werkzeug GmbH

Pacherstraße 20
A-6020 Innsbruck
at@pichler.tools
+43 512 344 552

Zugspitzstraße 33
D-82467 Garmisch-Partenkirchen
de@pichler.tools
+49 8821 6869 780

PICHLER Werkzeug AG

Rünenbergerstrasse 31
CH-4460 Gelterkinden
ch@pichler.tools
+41 61 981 33 55

PICHLER Utensili S.r.l. Uni Personale

Via Giovo, 129/D
I-39049 Vipiteno
it@pichler.tools
+39 472 970 042

PICHLER Outillage Sàrl

19a, rue de Reiningue
68310 Wittelsheim, France
fr@pichler.tools
+33 3 89 551 596

PICHLER TOOLS LTD

Ednaston Business Centre
Hollington Lane, Ednaston
Ashbourne · DE6 3AE
uk@pichler.tools
+44 1335 360 759

PICHLER Outillage BVBA

Industrieweg 45
8800 Roeselare
Belgium
be@pichler.tools
+32 495 400 810



pichler.tools



/pichlerwerkzeug



/pichlerwerkzeug



/pichlerwerkzeug



www.pichler.tools

 **PICHLER**
built to succeed.